



18" PEDESTAL FAN USER MANUAL


MODEL: ASB-1802B 110V-120V~ 60HZ 80W

SAFETY PRECAUTIONS

Read and save these important safety instructions before using this fan, when using electrical appliances, basic safety precaution should always be followed including the following:

- To protect against electrical shock, do not place fan in window, immerse unit, plug or cord in water, or spray with liquids.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Use this fan only as described in this manual. Other uses not recommended may cause fire or electric shock.
- To disconnect, grip the plug and pull it from the wall outlet. Never yank the cord.
- Unplug the fan from the outlet when not in use, when moving fan from one location to another and before cleaning.
- The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Do not operate the fan in the presence of explosive and/or flammable fumes.
- Do not place the fan or any parts near an open flame, cooking or other heating appliance.
- Always use on a dry, level surface.
- Avoid contact with moving fan parts.
- Close supervision is necessary when any appliance is used by or near children. Children being supervised not to play with the appliance.
- WARNING: To reduce the risk of electrical shock and injury to persons, do not use in window.
- WARNING: To reduce the risk of electrical shock, DO NOT use this fan with any solid-state speed control device.
- WARNING: To reduce the risk of fire, electric shock, or injury to persons, unplug or disconnect the appliance from the power supply before cleaning and user-maintenance, such as lubrication.

- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- WARNING: To Reduce The Risk Of Fire, Electric Shock Or Injury To Persons, Do Not Use Replacement Parts That Have Not Been Recommended By The Manufacturer (e.g. Parts Made At Home Using A 3D Printer).

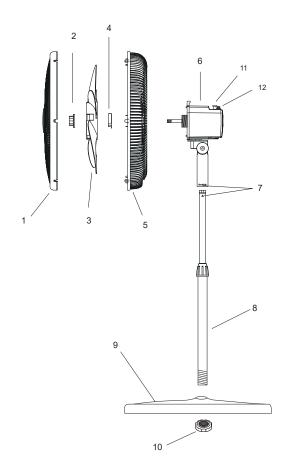

SR.	Item name			
1	Front grill			
2	Blade nut			
3	Blade			
4	Rear grill nut			
5	Rear grill			
6	Motor			
7	Connector			
8	Pole			
9	Base			
10	Base lock nut			
11	Oscillation knob			
12	Switch			

ASSEMBLY INSTRUCTIONS

- 1. Match the stand (8) and the base (9), fix the screw and the nut (10) to tighten the stand.
- 2. Align the motor with the mark on pipe (7), then insert it. And tighten the tube by turning it left or right to the lock position.
- 3. Set the Rear Grille (5) in the proper position with HANDLE UP.
- 4. Screw on plastic Grille Lock Nut (4) clockwise tightly to attach grille.
- 5. Install the Blade (3) onto the Shaft Pin until it reaches the retaining pin.
- 6. Screw the Spinner Cap (2) anti-clockwise onto the Shaft Pin.
- 7. Test Blade (3) operation by rotating it with your hand. There should be no friction with the Grille Lock Nut (4). If Blade does not rotate freely, repeat steps 1-4.
- 8. To attach the Front Grille (1) onto the Rear Grille (5), align with clips make sure the grille is locked.

OPERATING INSTRUCTIONS

- Please make sure the switch is in the off position and fixed on the motor house. Then insert the power plug into the specified voltage AC outlet on the date plate.
- 2. The speed is adjusted by moving the knob to the desired setting. The numbers 0, 1, 2, 3 on the board indicates off, slow, moderate and fast in the proper order.
- 3. To set the fan into oscillation, depress the Oscillating knob on the top of the motor assembly. The fan head will pivot side to side. For stationary operation, pull up the Oscillating knob.
- 4. Stand fan height adjust function. Please loose the height adjustment lock and adjust to the desired height and then fasten the lock.

FAN STORAGE

Your fan can be stored in the off-season either partially dissembled of assembled. It is important to keep it in a safe, dry location.

- If stored disassembled, we recommended using the original (or appropriately sized) box.
- If stored assembled or partially assemble, remember to protect the fan form dust.

SERVICE INSTRUCTIONS

- 1. Do NOT attempt to repair of adjust any electrical or mechanical functions on this unit. Doing so will void the warranty.
- If you have any questions regarding this unit's operation or believe any repair is necessary, please write to our consumer service department.

CLEANING/MAINTENANCE

Follow these instructions to correctly and safely care for your power fan.

Please remember:

- Always unplug the fan before cleaning or disassembling.
- Do no allow water to drip on or into the fan motor housing.
- Do not use any of the following as a cleaner: gasoline, thinner, or benzene.